


HOW TO CONNECT THE PHONE LINE TO SC601TA

Take your RED and GREEN wire from you phone line (or whatever combination you have that makes up you telephone circuit)

**PLACE THEM FIRMLY IN
THE MIDDLE TWO V
SHAPED CONNECTIONS
ONLY!**

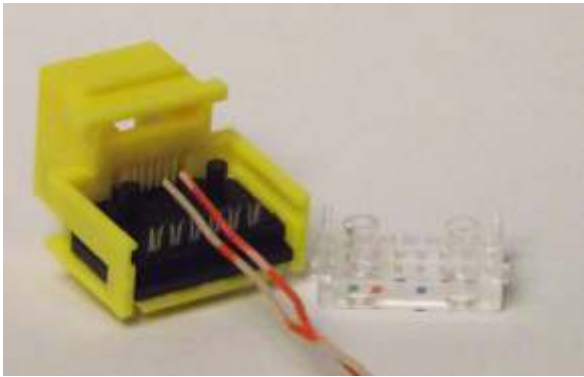

Take clear cap and place over the jack (see below)

PRESS FIRMLY UNTIL CAP HAS PUSHED THE WIRES INTO THE V INSULATION DISPLACEMENT CONNECTION

PLUG RJ11 PIGTAIL FROM PHONE INTO JACK

YOU CAN LEAVE LOOSE IN THE TELEPHONE OR USE THE ENCLOSED DOUBLE SIDED TAPE TO FASTEN TO THE BACKPLATE

