




HOW TO INSTALL “PLUG-N-PAGE” FOR SC-3 AIPHONE COMPATIBLE

Hook up your wiring exactly as you have in the past. Run your 6 or 4 conductor wire to the desired area. Mount your metal back plate to the wall or pole bringing your wire through the middle hole in the back plate. Strip the insulation off of the wires approximately 1/2" or more. Wrap the ends of the wires around the screws in the barrier strip mounted on the back plate keeping the color code the same from the page adapter. Leave the pigtail assembly on the barrier DO NOT CHANGE PIGTAIL WIRING. **NOTE:** The color code does not necessarily have to match the charts below but to assure continuity continue the same code through out the installation.

MC-3 TO SC-3 ADAPTER PLATE STOR-COM, INC. 1-800-356-0368

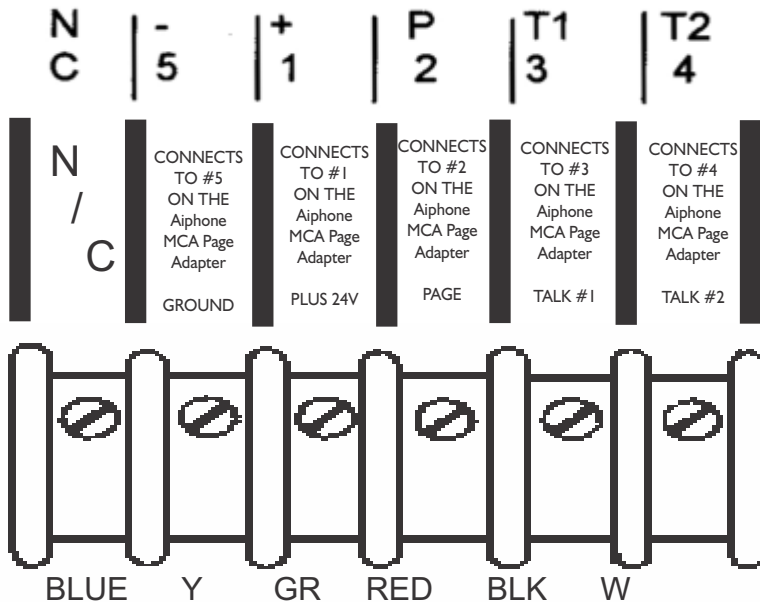


Pigtail Wiring Code For
SC-3 AIPHONE Compatible

THEN JUST

PLUG



N

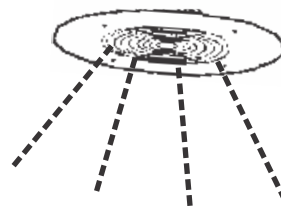

PAGE



“Simple Communications For A Not So Simple World”

StoreCom Equipment LLC, 1102 E. Dixie Dr., West Carrollton OH 45449
1-800-356-0368 Fax 1-937-428-9656
www.storecomllc.com E-Mail Sales@storecomllc.com