


200BPA INSTALLATION INSTRUCTIONS

This is the label over the screw connectors on the front of your 200BPA Page Adapter/Power Supply. Just hook up the wires from your intercoms in the order described below.

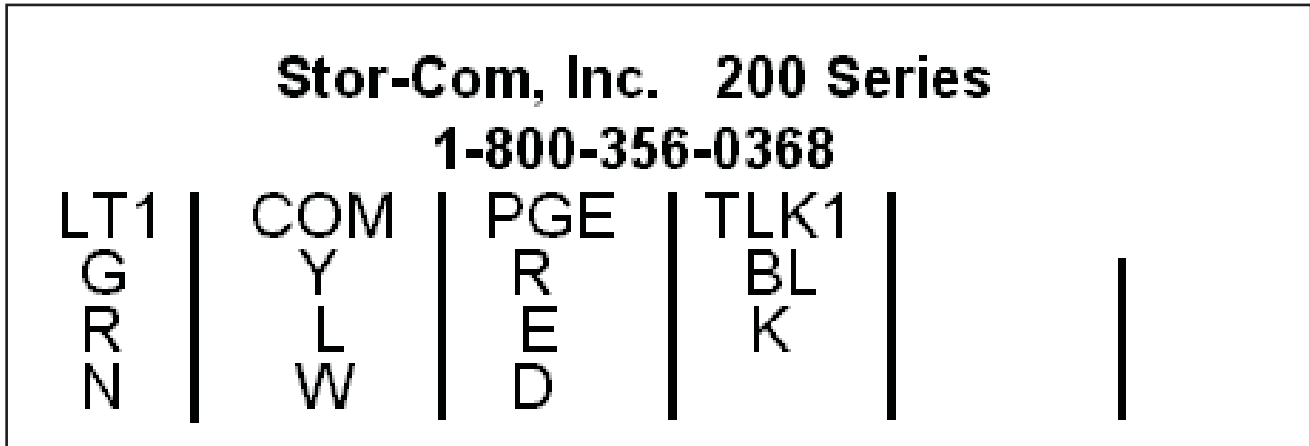

Green wire from intercoms should be attached here

LT1

Yellow wire from intercoms should be attached here

COM

Red wire from intercoms should be attached here

PGE

Black wire from intercoms should be attached here

TLK1

Call 1-800-356-0368 for
Technical Assistance



“Simple Communications For A Not So Simple World”

StoreCom Equipment LLC, 5335 Springboro Pike Suite J, West Carrollton OH 45449
1-800-356-0368 Fax 1-937-428-9656
www.storecomllc.com E-Mail Sales@storecomllc.com