


HANDSET INSTALLATION INSTRUCTIONS

This is a simple wiring diagram of how to install a StoreCom handset on to the PB0203 circuit board. Just follow this schematic and you will have a cost effective intercom system.

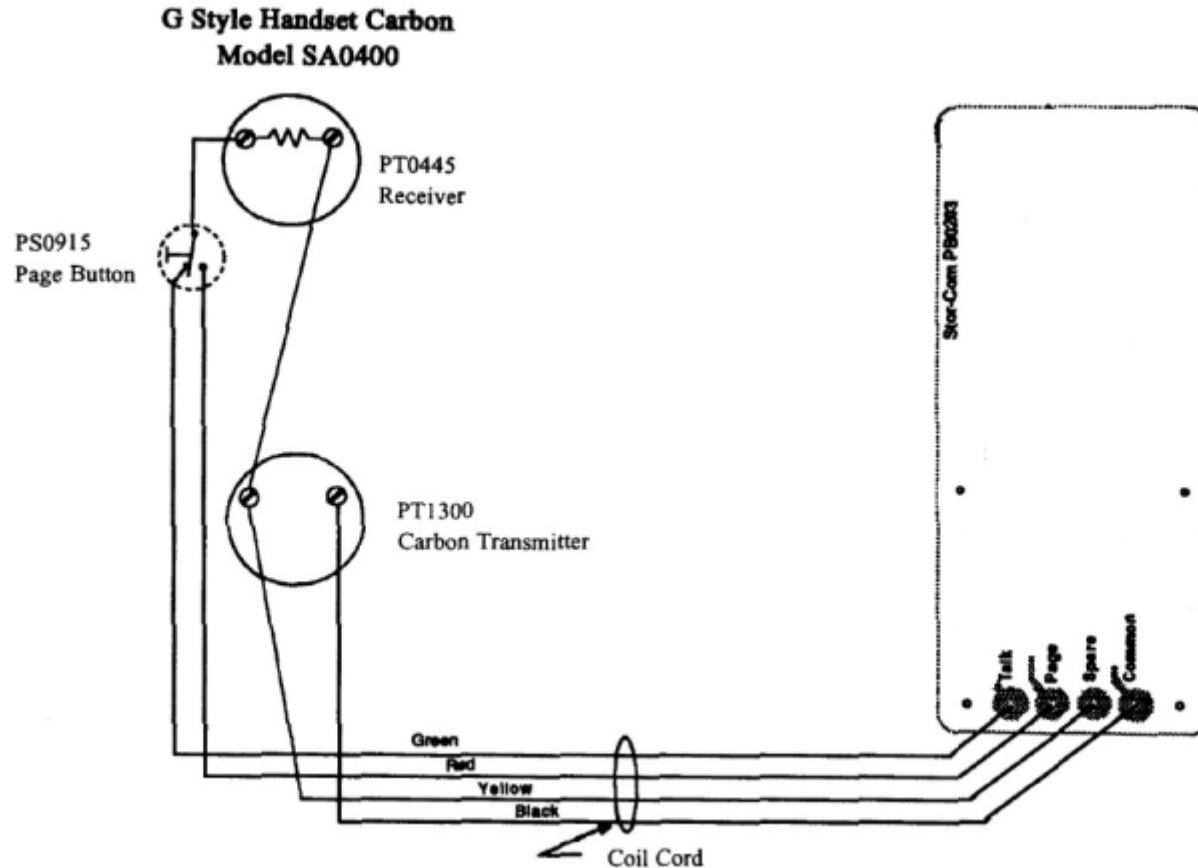

“Simple Communications For A Not So Simple World”

StoreCom Equipment LLC, 1102 E Dixie Dr, West Carrollton OH 45449
1-800-356-0368 Fax 1-937-428-9656
www.storecomllc.com E-Mail Sales@storecomllc.com