



## SC601T 911 EMERGENCY TELEPHONE INSTALLATION INSTRUCTIONS

To install the SC601T 911 Emergency Telephone.

First - run wires to desired area. Home run each telephone back to your telephone switch or telephone block.

Second - Take your RED and GREEN wire from you phone line (or whatever combination you have that makes up you telephone circuit) **PLACE THEM FIRMLY IN THE MIDDLE TWO V SHAPED CONNECTIONS ONLY!**


Take clear cap and place over the jack

**PRESS FIRMLY UNTIL CAP HAS PUSHED THE WIRES INTO THE V INSULATION DISPLACEMENT CONNECTION**

Plug the grey jack into the block mounted on the back plate as you hook the phone over the top of the plate.

Attach the phone body to the plate and gently screw down the phone to the plate

PHONE SUBPANEL

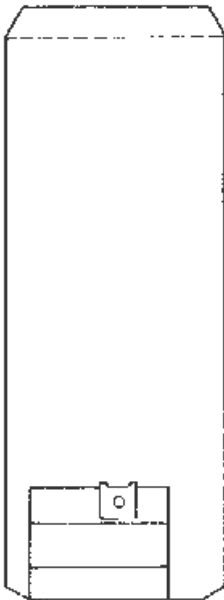

### OPERATION

When the handset is picked up you have 3 seconds to push the black button. If you do not push the button in the 3 seconds the phone will not dial - going to a busy signal.

**To dial - hang up the handset**

This telephone is preprogrammed to dial 911. If you need another number dialed or any other changes to the dialing codes - please contact StoreCom at 800-356-0368 and a new microprocessor can be programed to replace the current one for a nominal charge.

FREE TECHNICAL ASSISTANCE IS AVAILABLE AT:

**1-800-356-0368**



**“Simple Communications For A Not So Simple World”**

StoreCom Equipment LLC, 1102 E. Dixie Dr., West Carrollton OH 45449

1-800-356-0368 Fax 1-937-428-9656

www.storecomllc.com E-Mail Sales@storecomllc.com